

How to remove a wheel pin

PICTORIAL INSTRUCTIONS TO REMOVE A WHEEL PIN

1-USE DRILL No. 29 (.136")



2- DRILL HOLE AT THE CENTER OF PIN 3/4" DEEP



3- INSERT SCREW (#8 X 1 5/8" Phil Self-Drilling Screw)



4- USING PHIL TIP

5- SCREW IT 1/2"- 3/4" DOWN



6- GRAB SCREW WITH VISE-GRIPS PLIERS



7- HOLD DOWN CASE & PULL UP



8- PIN WILL PULL OUT



9- REMOVE PIN



10- REPLACE PIN WITH "7047 Rev B" PIN

